

CLASSROOM PRESENTATION SERIES

Thank you for choosing the Anywhere Cart **AC-WRLS-MIC** Professional Rechargeable UHF Wireless Microphone Kit.

Please review this guide entirely before using the product.

Table of Contents

Body Transmitter & Receiver Overview	2 -	-3
Testing & Setting Up Your Mic	4 -	. 5
Using Your Mic	6 -	7
Troubleshooting	8 -	C



- Body Transmitter
- Receiver
- Lavalier (Lapel) Microphone
- 4 Headset Microphone
- Interview Microphone
- 6 Charging Cable
- TRS Adapter Cable
- 8 TRRS Adapter Cable

Specifications subject to change without notice.



BODY TRANSMITTER


Overview




NOTE: Before use, fully charge your Body Transmitter & Receiver.





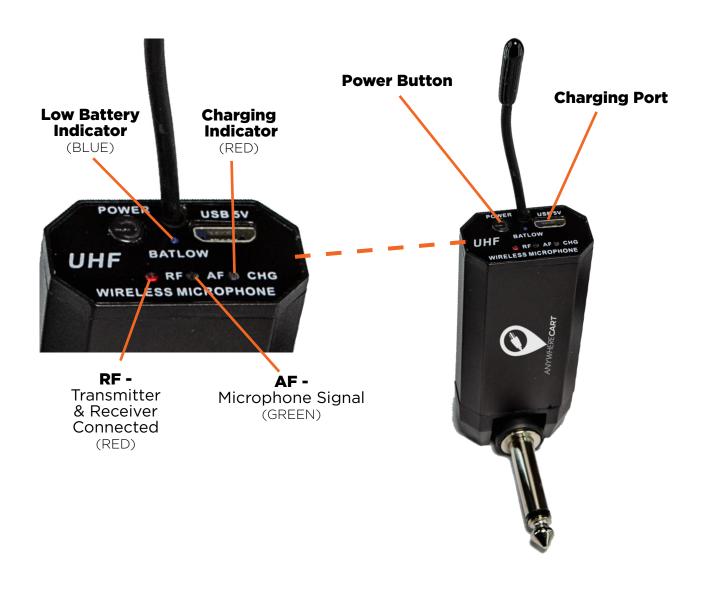

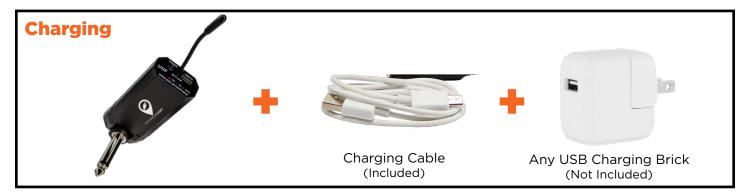

NOTE: Before use, fully charge your Body Transmitter & Receiver.



TESTING YOUR MIC

Press & hold the power button on the Body Transmitter until the unit turns on **AND** turn the volume dial all the way to the +.




Insert the Microphone plug into the Body Transmitter, then screw the sleeve in clockwise.



Press & hold the power button on the Receiver until the unit turns on.



On the Receiver, ensure the **RF** LED illuminates RED. Then, using the Body Transmitter, speak into the Microphone AND ensure the **AF** LED illuminates GREEN while speaking.

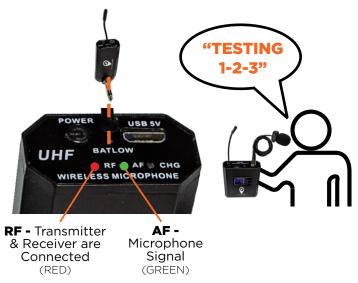





SETTING UP YOUR MIC


Lavalier

- Clip the Lavalier Microphone to the presenter's lapel around the sternum for the best sound quality.
- Clip the Body Transmitter to the belt, waist or onto the presenter's pocket, ensuring the antenna is not obstructed.

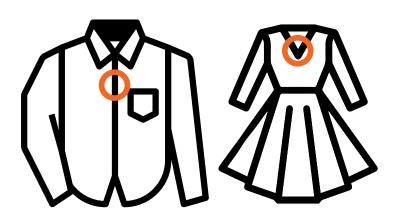

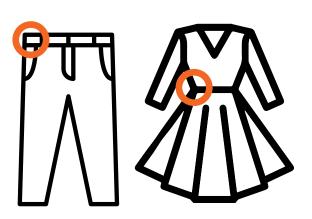

While the maximum distance from the receiver is around 300 feet, it is recommended to stay within 165 feet for the best sound quality. If sound quality deteriorates, try switching frequencies.

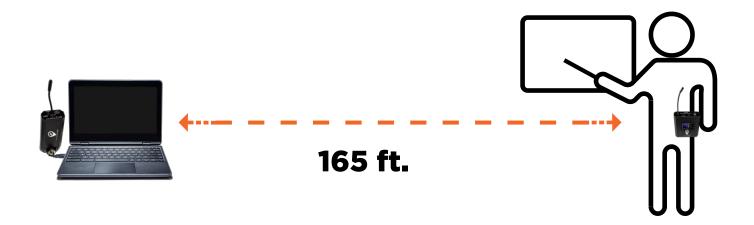




USING YOUR MIC

Determining Device Input

Before attaching the Receiver to your device, determine which microphone input is available on your device.

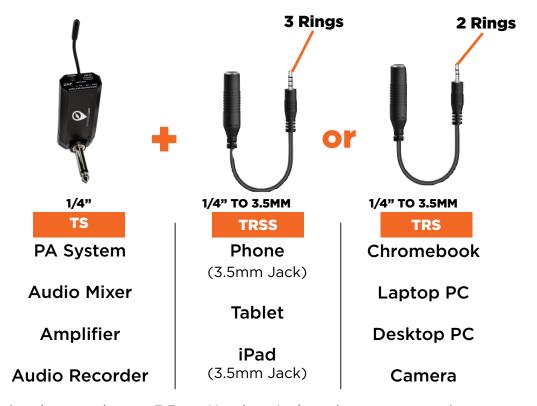


NOTE: If your device does not have a 3.5mm Headset Jack or does not recognize an external microphone, additional adapters might be required (Not Included).



For Apple iPhone / iPad: Lightning Cable to 3.5mm Headset Jack (Not Included)



 For Apple MacBook Air or other Laptop: USB External Stereo Sound Adapter (Not Included)











USING YOUR MIC

Device Settings


Depending on your device and streaming software, changing the audio input to the correct setting is necessary for your wireless microphone to work properly.

Chromebook


Olick the time in the bottom right corner




Click on "Headset" | Click on (Audio Settings)

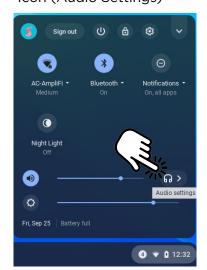

3 Under Input, Select "Mic Jack"

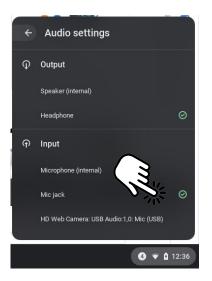

Sync buttons on headset

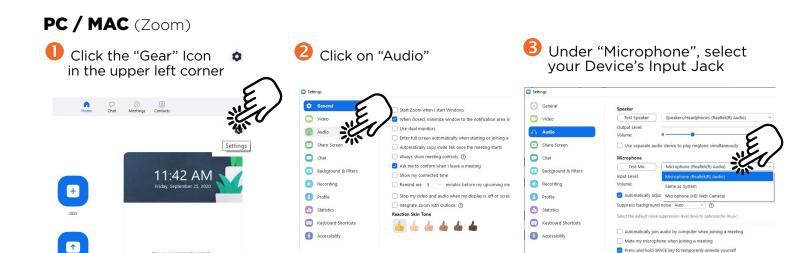



TROUBLESHOOTING


• Problem: No Sound

Solution: On the Body Transmitter, turn the volume dial all the way up to the +.



2 Problem: Sound not loud enough

Solution # 1: In your device settings, turn the volume all the way up.

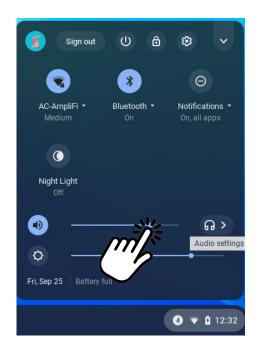

Problem: Sound not loud enough (Lavalier)

Solution # 2: Speaking at a normal volume, move the Lapel Clip up or down until sound quality improves.







TROUBLESHOOTING

4 Problem: Sound cuts out or garbled

Solution #1: On the Body Transmitter, view the Signal Strength indicator and move closer to the Receiver until sound quality improves.

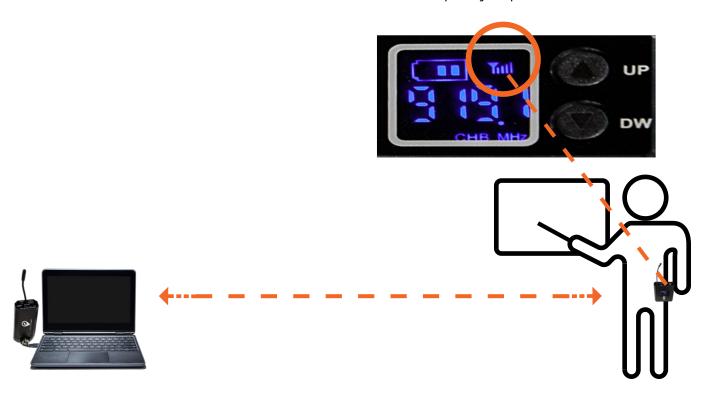

5 Problem: Sound cuts out or garbled

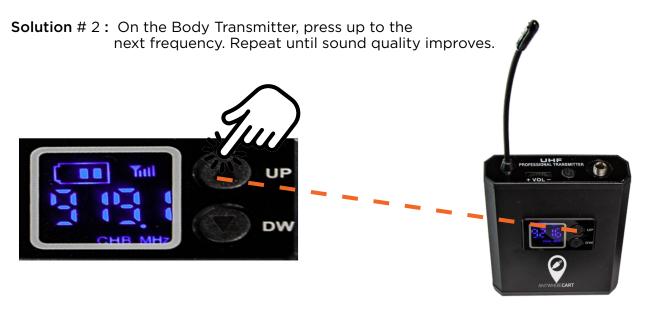

Limited Warranty

- 1. The terms below shall have the following definitions for purposes of this Warranty:
- "Client" means the original party purchasing the Products from Anywhere Cart or from an authorized dealer to sell Anywhere Cart branded products.
- "Electronics" mean the body transmitter and receiver. Cables and cords are not warrantied.
- "Products" means any goods and any related services to be supplied by Anywhere Cart to the Client pursuant to the Acceptance of an Order and any other goods or services which Anywhere Cart supplies to the Client from time to time.

Anywhere Cart warrants that the Products to be supplied to Client are free from defects in material and workmanship under normal use and service for which they were intended if, but only if, the Products have been properly installed and operated. Anywhere Cart's obligation under this Warranty is limited to only supplying replacement part(s) for any part(s) which are returned and found to be defective, provided that such part(s) are returned to Anywhere Cart within the following Warranty Period:

a. With regard to Electronics, the Warranty Period shall be for a period of one (1) year from the date of delivery of the Product to Client.

Except as prohibited or limited by applicable law, Anywhere Cart does not warrant that the Products meet the requirements of any safety code of any country, state, municipality, or other jurisdiction, and Client assumes all risk and liability whatsoever resulting from the use thereof, whether used singly or in combination with other machines or apparatus. This Warranty shall not apply to any of Anywhere Cart's Products, or parts thereof, which have been repaired or altered, without Anywhere Cart's written consent, outside Anywhere Cart's facility or altered in any way so as, in the sole judgment of Anywhere Cart, to adversely affect the stability or reliability of the Products, or if such Products have been subject to misuse, negligence, or accident, or have been operated in a manner not in accordance with Anywhere Cart's printed instructions or have been operated under conditions more severe than, or otherwise exceeding, those set forth in the specifications for such Products.

EXCEPT AS PROHIBITED OR LIMITED BY APPLICABLE LAW, THIS WARRANTY AND THE OBLIGATIONS AND LIABILITIES OF Anywhere Cart ARE EXCLUSIVE AND IN LIEU OF WARRANTIES, GUARANTIES OR LIABILITIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY FOR MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ARISING BY LAW OR OTHERWISE OR WHETHER OR NOT OCCASIONED BY Anywhere Cart'S NEGLIGENCE AND CLIENT HEREBY WAIVES ALL REMEDIES NOT EXPRESSLY PROVIDED IN THIS WARRANTY. THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT SIGNED BY Anywhere Cart AND CLIENT, REGARDLESS OF THE FAILURE OF THE SOLE AND EXCLUSIVE REMEDIES PROVIDED IN THIS WARRANTY, Anywhere Cart WILL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF REVENUE, BUSINESS OR PROFITS, LOSS RESULTING FROM BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, LOSS RESULTING FROM ANY CLAIM BY ANY THIRD PARTY, ANY LOSS DUE TO DAMAGE TO PROPERTY, AND INJURY TO OR DEATH OF ANY PERSONS RESULTING, DIRECTLY OR INDIRECTLY, FROM THE USE OR LOSS OF THE PRODUCTS OR ANY OTHER PECUNIARY LOSS) OF ANY KIND OR NATURE. Anywhere Cart NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OR USE OF THE PRODUCTS, AND THERE ARE NO ORAL AGREEMENTS OR WARRANTIES COLLATERAL TO OR AFFECTING THIS WARRANTY. THE EXCLUSION OF SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES IS AN INDEPENDENT AGREEMENT OF Anywhere Cart AND CLIENT APART FROM THE SOLE AND EXCLUSIVE REMEDIES PROVIDED IN THIS WARRANTY.

Client shall notify Anywhere Cart by registered or certified mail, return receipt requested, of a breach of this Warranty within thirty (30) days after discovery thereof, but not later than the expiration of the applicable Warranty Period, otherwise such claims shall be deemed waived.

2. Limitations of Warranty.

Anywhere Cart makes no warranties to any third party. You are responsible for all claims, damages, settlements, expenses, and attorneys' fees with respect to claims made against You as a result of Your use or misuse of the Product. This warranty applies only if the Product is installed, operated, maintained, and used in accordance with Anywhere Cart specifications. Specifically, the warranties do not extend to any failure caused by (i) accident, unusual physical, electrical, or electromagnetic stress, neglect or misuse, (ii) fluctuations in electrical power beyond Anywhere Cart specifications, (iii) use of the Product with any accessories or options not furnished by Anywhere Cart or its authorized agents, or (iv) installation, alteration, or repair of the Product by anyone other than Anywhere Cart or its authorized agents.

3. Disclaimer of Warranty.

Except As Expressly Provided Otherwise Herein And To The Maximum Extent Permitted By Applicable Law, Anywhere Cart Disclaims All Other Warranties With Respect To The Product, Whether Express, Implied, Statutory Or Otherwise, Including Without Limitation, Satisfactory Quality, Course Of Dealing, Trade Usage Or Practice Or The Implied Warranties Of Merchantability, Fitness For A Particular Purpose Or Noninfringement Of Third Party Rights.

4. Limitation of Liability.

In no event shall Anywhere Cart be liable for indirect, incidental, special, exemplary, punitive, or consequential damages of any nature including, but not limited to, loss of profits, data, revenue, production, or use, business interruption, or procurement of substitute goods or services arising out of or in connection with this limited warranty, or the use or performance of any product, whether based on contract or tort, including negligence, or any other legal theory, even if Anywhere Cart has advised of the possibility of such damages. Anywhere Cart's total, aggregate liability for damages of any nature, regardless of form of action, shall in no event exceed the amount paid by you to Anywhere Cart for the specific product upon which liability is based.

5. Governing Law and Your Rights.

This warranty gives You specific legal rights; You may also have other rights granted under state law. These rights vary from state to state

6. Warranty Period for Anywhere Cart Product Purchased:

AC-WRLS-MIC	1 Year Electronics
-------------	--------------------