


Contents

1.	Overview	2
2.	Fitting the headset	3
3.	Setting up	4
4.	Making a call	7
5.	Answering a call	8
6.	Features	8
7.	Reset / Pairing	11
8.	Troubleshooting & FAQ	12
9.	Maintenance	12
10.	Appendix GN 1000 Remote Handset Lifter (RHL) (optional accessory)	13


Thank you

Thank you for purchasing Jabra T5330, we hope you will be delighted with its operation. Please read the user guide to get started and to make best use of the headset's many features.

1. Overview

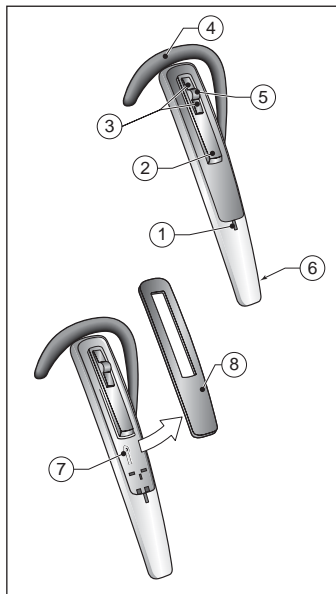**Headset**

- [1] Visual indicator
- [2] Answer/end button
- [3] Volume up/down
- [4] Ear hook
- [5] Mute button
- [6] Microphone
- [7] Reset button
- [8] Snap-on cover (replaceable)

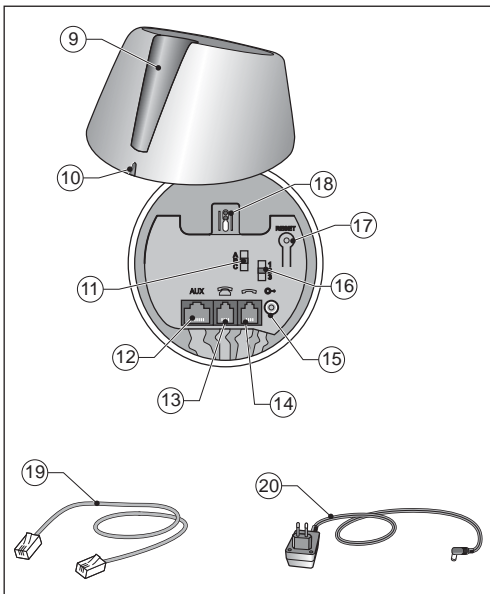**Base unit**


- [9] Charge cradle
- [10] Visual indicator
- [11] Clear dial tone switch
- [12] AUX port
- [13] Telephone port
- [14] Handset port
- [15] AC power adapter port
- [16] Transmit volume
- [17] Reset button
- [18] Headset switch

Cords & adapters

- [19] Connection cord
- [20] AC power adapter

2. Fitting the headset

2.1

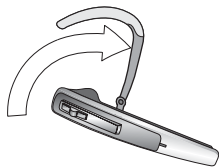

2.2




Fitting to ear


2.1 Open hinged ear hook as wide as possible. ¹⁾

2.2 Hold headset to the ear so speaker fits comfortably and microphone points toward the mouth.

2.3

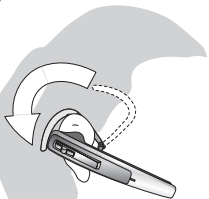


2.4

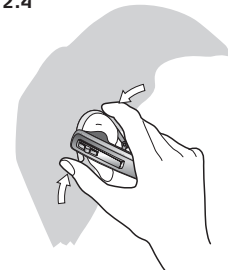


2.3 Close hinged ear hook over the ear.

2.4 Bend or twist flexible rubber part of the ear hook for a comfortable fit.

2.5

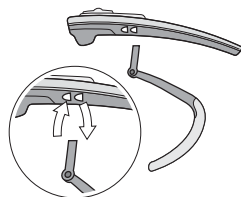

2.6

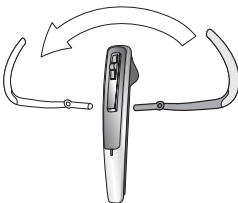

Further adjustment

2.5 Ear hook hinge can be placed in either of 2 slots, to provide the best possible fit.


Fitting to left ear

2.6 Pull ear hook hinge from the slot and insert it on opposite side of headset marked with L. Perform steps 2.1 – 2.4 above.


1) **Note:** The new headset is configured for use with the right ear.

3. Setting up


3.1

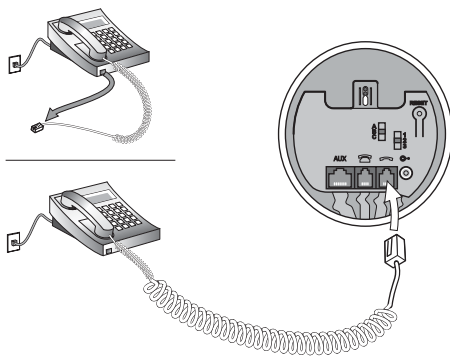



If your telephone has a headset port, go directly to 3.2b.

3.1 Unplug handset cord from your telephone and connect to the port on base unit marked with .

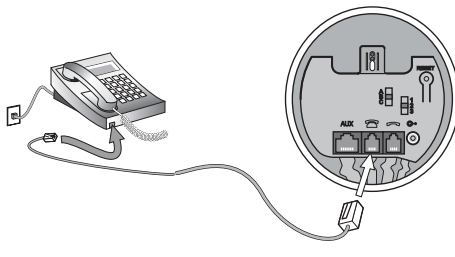
3.2



3.2a Connect enclosed telephone cord to the now empty handset port on telephone, and to the port on base unit marked with .

3.2b (Headset port use only) Connect enclosed telephone cord to the headset port on telephone, and to the port on base unit marked with .


3.3

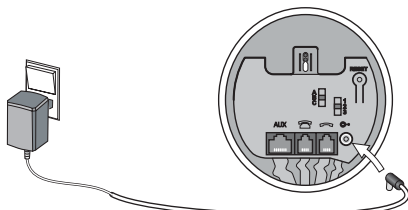

3.3 Connect AC power adapter to port on bottom of base unit, then connect to AC power outlet. Visual indicator on base will light green.

Note: AUX port is used for Remote Handset Lifter (RHL). Please refer to Appendix.

3.4

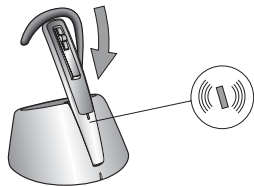


3.4 Place headset in charge cradle and charge a minimum of 30 min. before use. A full charge takes about 2 hours. Visual indicator on headset will flash green while headset is charging, and light steady green when fully charged.

3.5



3.5 Turn on headset by pressing answer/end button for 3 sec. (visual indicator will light green for 2 sec. and two “beeps” will be heard), or by placing headset in charge cradle. Turn off headset by pressing answer/end button for 3 sec. (visual indicator will light red for 2 sec. and two “beeps” will be heard).

3.6

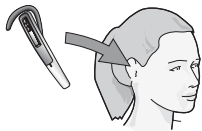

Clear dial tone


3.6 Take headset out of charge cradle and put it on.

3.7




3.7 Lift handset from telephone and listen for a dial tone in headset.

3.8

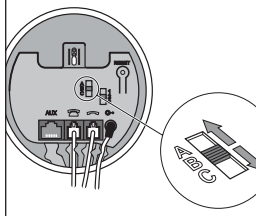

3.8 If dial tone is missing or unclear, slowly slide the clear dial tone switch on bottom of base unit through the 3 settings.

3.9

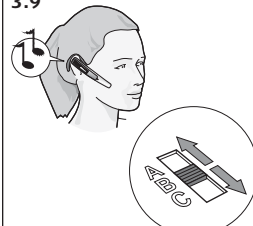


3.9 Set switch to the position that gives the clearest dial tone.

3.10

**Setting transmit volume**


3.10 Make a call (see section 4) to someone who can act as a test person.

3.11

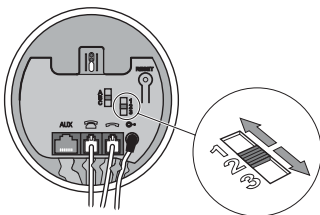


3.11 Adjust outgoing volume with transmit volume control on base unit. Switch through the 3 settings until test person confirms the appropriate volume. ¹⁾

3.12

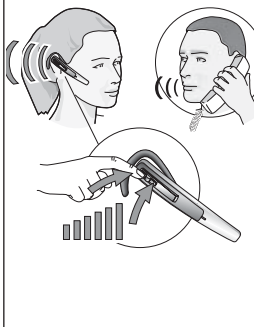**Setting incoming volume**

3.12 During a call, adjust incoming volume by pressing Volume button on headset.

3.13

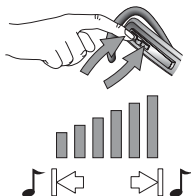


3.13 A tone in headset will indicate when min./max. volume is reached.

¹⁾ **Note:** If you can hear your own voice, transmit volume is probably too high.

4. Making a call

4.1

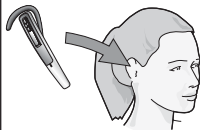


4.2

4.1 Put on headset. ¹⁾

4.2 Lift handset from telephone, or press telephone's "line" button if connected to the headset port.

4.3

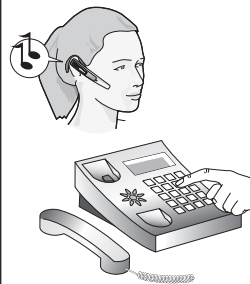

4.4



4.3 Wait for dial tone, then dial number.

4.4 To end call, replace handset on telephone, or press telephone's "end call" button if base is connected directly to telephone's headset port.

4.5



4.6



Making a call with handset


4.5 Place headset in charge cradle.

4.6 Use handset as usual.

¹⁾ **Note:** If making a call with telephone handset, make sure the headset is placed in charge cradle. Otherwise, the call will be routed through to the headset.

5. Answering a call

5.1

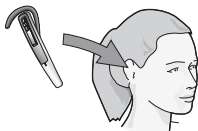

5.2

5.1 Put on headset. ¹⁾

5.2 Lift handset from telephone, or press telephone's "line" button if connected to the headset port.



5.3





5.3 To end call, replace handset on telephone, or press telephone's "end call" button if base is connected directly to telephone's headset port.

6. Features

6.1

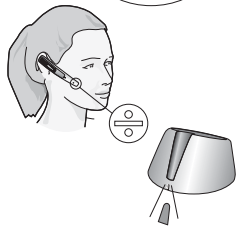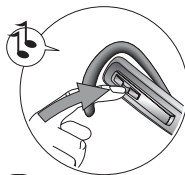

6.2

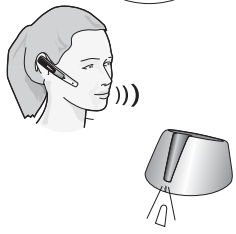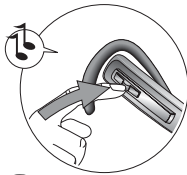


Muting & unmuting

6.1 Press mute button on headset. Visual indicator on base unit will turn red and a dual tone will be heard in the headset.

6.2 To unmute, press mute button again. Visual indicator on base unit will change from red to flashing green and a dual tone will be heard in the headset.

1) Note: If answering a call with telephone handset, make sure the headset is placed in charge cradle. Otherwise, the call will be routed through the headset.


6.3

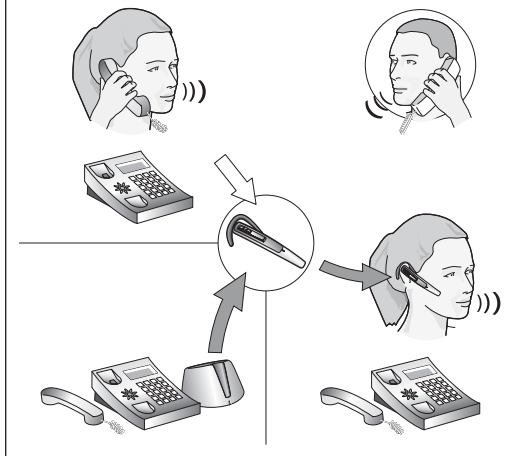

Switching from handset to headset

6.3 During a call using telephone handset, take headset from charge cradle. The call will automatically be routed through the headset. ¹⁾

6.4

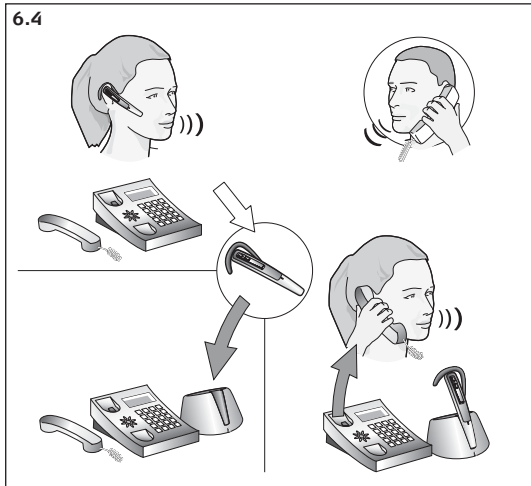


Switching from headset to handset

6.4 During a call using the headset, pick up telephone handset and replace headset to charge cradle. Call will not be routed through to the telephone handset, before headset is in the charge cradle.


1) Important: Do not replace handset on telephone, as this will disconnect the call.

6.5

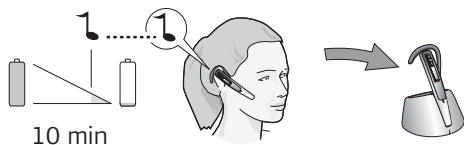**Low battery**

6.5 App. 10 minutes before the headset runs out of battery, the visual indicator on headset will start to flash with a red light and a series of tones will be heard. If the battery runs out of power, visual indicator on headset will switch off automatically. Replace headset to charge cradle, and continue the call using telephone handset.

6.6

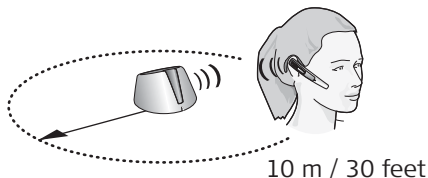**Out of range**


6.6 If going out of range (approx. 10 meters/30 feet), all buttons except answer/end button will stop working until back in range again. ²⁾

If headset is muted when going out of range it will also be muted when going within range again.

Features:

Range	10 m / 30 feet
Talk time / standby time	4 hours / up to 60 hours
Transmission protocol	Bluetooth
Frequency band	2,4 GHz

6.7

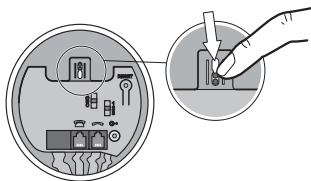
**Headset switch**

6.7 If the headset is absent, the headset switch must be activated in order to use the headset.

2) Important: If headset is out of range for more than 1 min., the link between base and headset will be terminated.


7. Reset / Pairing

7.1

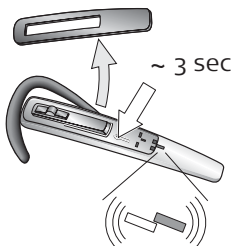


7.1 Remove snap-on cover. Press reset button on headset for 3 sec. Visual indicator on headset will flash red/green rapidly. ¹⁾

7.2

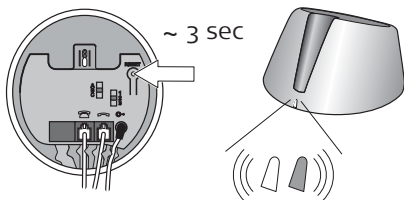

7.2 Then press reset button on base unit for 3 sec. Visual indicator on base unit will flash red/green rapidly.

7.3

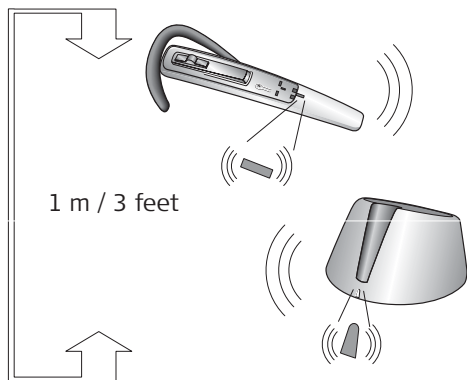

7.3 Make sure headset and base are within 1 meter/3 feet of each other. When pairing is successful, both visual indicators will flash green 10 times, and the visual indicator on base unit will turn to steady green.

1) Note: The headset is already paired with the base unit from the factory. Pairing should only be necessary if a new headset has to work with an existing base unit (or vice versa).

8. Troubleshooting & FAQ

- Q:** Nothing happens when I try to adjust the clear dial tone.
- A:** Make sure the base is powered (visual indicator on base unit is steady green). Then establish a voice link between base and headset (visual indicators on base unit and headset are flashing green). Also ensure that the telephone is activated (handset is off the hook or "line" button is pressed).
- Q:** I hear myself when I talk.
- A:** Your transmit volume level (please refer to section 3.10) is probably too high. Set the transmit volume level to a lower level (3->2, 2->1).
- Q:** The sound in the headset is of poor quality or the person in the other end can't hear me.
- A:** Make sure that you have positioned the clear dial tone switch correctly. To do this call a friend to adjust the clear dial tone switch.
- Q:** When I press the answer/end button, the GN 1000 RHL lifts, but the call is not connected.
- A:** Make sure that you are using the telephone's handset port, and not the headset port (if your telephone has one), when using a GN 1000 RHL for remote answering.
- Q:** I have moved desk at work. Is it possible to put my headset onto another base?
- A:** Yes, this is possible. The headset only needs to be paired to the new base. Just follow the procedure as described in section 7 of this guide.

Note: If your desk phone has a volume button, it might help to adjust it to optimize the sound quality in your headset.

9. Maintenance, safety and disposal

Maintenance

The ear hook can be wiped with a dry or slightly damp cloth. The cords and base unit can be dry-dusted as required. Avoid getting moisture or liquids into any button sockets, receptors or other openings. Avoid exposing the product to rain.


Children and product packaging

The packaging, including plastic bags and wrapping parts, are not toys for children. The bags themselves or the small parts they contain may cause choking if ingested.


Batteries and product disposal

Do not expose the headset batteries to heat. Dispose of the product and/or batteries according to local standards and regulations.

10. Appendix – GN 1000 Remote Handset Lifter (RHL) (optional accessory)

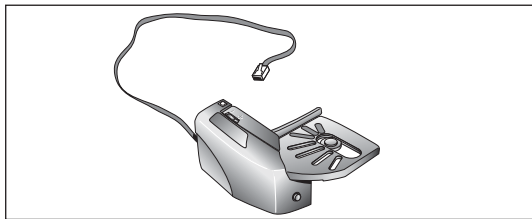


The GN 1000 Remote Handset Lifter (RHL) is an optional accessory that automatically lifts and lowers your telephone's handset when making, answering or ending a call.

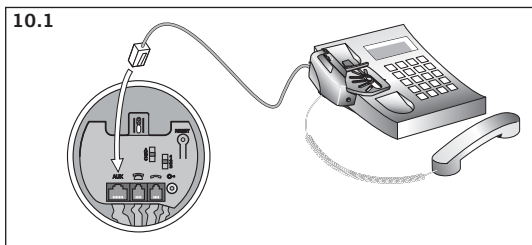


Setting up

10.1 Attach RHL to telephone handset cradle. Connect RHL cord to AUX port on bottom of base unit.

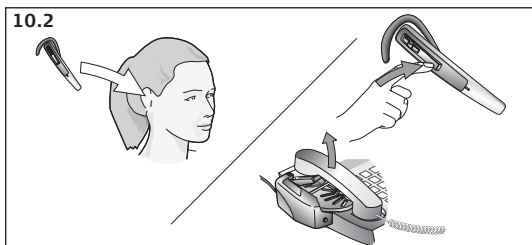

Making/answering a call

10.2 Put on headset, or press answer/end button if already wearing headset. The RHL will automatically lift telephone handset.

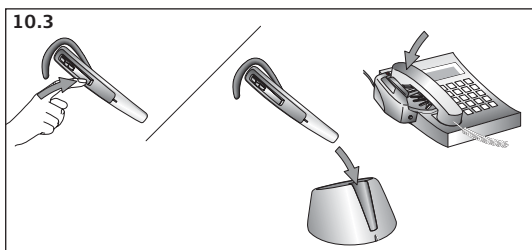

Ending a call

10.3 Press answer/end button, or place handset in charge cradle. The RHL will automatically replace telephone handset, and the call will be terminated.

Note: Out of range. If headset is out of range for more than 1 min., any on-going call will be terminated

