SUPERTOOTH

BLUETOOTH HANDSFREE

LIGHT

USER MANUAL



Nth America support@myblueant.com 1 866 891-3032

New Zealand support@blueant.com.au 0800 443 122 (NZ)

Australia support@blueant.com.au 1300 669 049 (AUS)


Product Description

SUPERTOOTH LIGHT is a Bluetooth handsfree kit that supports headset or handsfree profile phones. Its special features include Full DSP Noise Cancellation/Echo Cancellation, thus, it provides advanced audio quality. It is designed for easy handsfree operation and superior performance.

Don't forget: Drive safely and within the law.

Check if the national or local legislation in your country does limit the use of mobile phones while driving. It is up to the user of this product to respect the said legislation in the area where they lives.

Product Overview

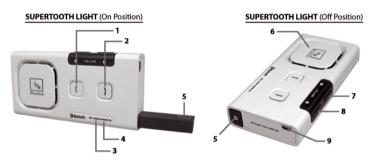

- 1 Accept Button
- 2 End/Reject Button
- 3 Bluetooth Indicator
- 4 Charge Indicator
- 5 Microphone Shaft *Press-and-release to Switch On *Push-in to Switch Off
- 6 Speaker
- 7 Volume Down
- 8 Volume Up
- 9 Charger Port
- 10 Magnets



Charging

When the Charge Indicator (4) turns Red, the kits' battery is low. Charge the unit.

Connect the supplied charger to an external power source.
 Connect the charger's plug to the Charger Port (9) of the SUPERTOOTH LIGHT.

Charge Indicator (4) Status:

Steady Red: Low Battery Steady Orange: Charging Steady Green: Full Charge

2. When fully charged, disconnect the charger.



Power On/Off

Power On: Push in the **Microphone Shaft (5)** until you hear a click, and release. The shaft will spring out from the body of the unit and fix in place.

Power Off: Push the Microphone Shaft (5) inside the unit until it clicks.

First Time Pairing to your Bluetooth Mobile Phone

When you turn ON your Supertooth Light for the first time, it will automatically go into Pairing mode ready to be found by devices in Bluetooth searches. *This will be the case until you have successfully paired a phone.* If you have already paired a phone, please go to the next section.

- Power ON your Supertooth Light. The Bluetooth Indicator (3) will turn a blinking red/blue, The kit is now in pairing mode.
- 2. Go to Point 3 in the next section, "Pairing to your Bluetooth Mobile phone"


Pairing to your Bluetooth Mobile Phone

Pair the SUPERTOOTH LIGHT to your Bluetooth mobile phone to create a "Pairing" link, or audio connection between the two. This has to be only done once when first connecting each new phone.

1. From OFF, Press and Hold the Accept Button (1).



2. While holding the **Accept Button (1)**, switch the kit on (Press-and-release the **Microphone Shaft (5)**).

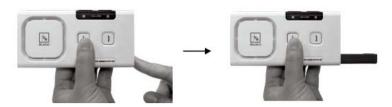

- 3. The Bluetooth Indicator (3) will turn a blinking red/blue, when you see this, release the Accept Button (1). The kit is now in pairing mode.
- 4. While the kit is in pairing mode, access the Bluetooth menu of your phone. Turn on the Bluetooth function then execute a Bluetooth search, or discover. (See your phone's manual for specific instructions.)
- 5. When the phone displays the list of Bluetooth devices, select ST LIGHT.
- 6. When the phone asks for the password, enter 0000 and press Ok.
- 7. Set the ST LIGHT as a trusted/authorized device, if this is option in your phone.

Important Note: The kit is now paired. Most phones automatically connect to the kit after pairing. With some phones you need to connect manually after pairing.

Go back to **Bluetooth > Paired devices >** highlight **ST LIGHT** > press **Options >** then press **Connect**.

When connected you may see the Bluetooth Symbol on your phone change slightly, either inverting in color or changing to a headset or car symbol. The kit is now ready to use.

Repeat steps 1 -7 above for each new phone you want to use with the Supertooth Light.

Installation

Fix the metal clip of SUPERTOOTH LIGHT to the sun visor.







Attach the magnetic back of SUPERTOOTH LIGHT to the fixed metal clip. The SUPERTOOTH LIGHT must be placed in such way that its microphone is directed to the mouth of the user.

Basic Operations

IMPORTANT:

The kit needs to be 'paired' to your Bluetooth mobile phone first, before you can use the following functions. See **Pairing to your Bluetooth Mobile Phone** on page 3.

Make a Call (Normal Dial):

Dial the number on your phone. Audio will automatically be on the kit.

Note: With some phones like Siemens S55 and Panasonic X70, audio is always on the phone during an outgoing call. You will need to press the **Accept Button** (1) for 1 second to transfer the audio to your kit.

Answer a Call:

During the ring tone, press **Accept Button (1)** for 1 second to answer the call.

End a Call:

Press End/Reject Button (2) for 1 second to end the call.

Voice Dial:

Important: Be sure your phone supports the voice dialing function and that it is activated. Record at least one **voice tag**. (Please refer to the instructions in your phone's user manual.) *Note: Voice dialing entries must be stored in the phone's memory, not on the SIM card!*

- 1. Press the Accept Button (1) for 1 second.
- 2. A voice dial beep will be heard on the kit to prompt the user to say the voice tag of the contact to call.
- 3. Say the voice tag exactly as how you recorded it.
- 4. The voice will be played back to you, and then the phone will dial the number automatically.

Redial (For Handsfree Profile Phones only):

Press Accept Button (1) for 3 seconds. The last dialled number will be redialled.

Reject a Call (For Handsfree Profile Phones only):

During the ring tone, press End/Reject Button (2). The incoming call will be rejected.

Volume Setting:

Increase or decrease the volume by pressing the **Volume Up (8)** or **Volume Down (7)** button. Press repeatedly until desired level is reached. This setting will be remembered by the kit.

Audio Transfer (For Handsfree Profile Phones only):

During an ongoing call, you can transfer the audio.

<u>Kit to Phone:</u> Push in the **Microphone Shaft (5)** or turn off the kit. The audio will be transferred automatically to the phone.

Phone to Kit: Press-and-release the Microphone Shaft (5) to turn the kit on. Note: Some phones do not connect automatically to the kit after turning on. With these phones, you need to press Accept Button (1) for 1 second to transfer the audio to the kit.

Advanced Functions

Multi-Pairing / Switching Connections Between Phones:

The SUPERTOOTH LIGHT can connect to only one phone at a time, but will remember the Pairing information of 5 Bluetooth phones. Each additional pairing after 5 phones, will automatically delete the phone that has not been used for the longest time. Thus, the SUPERTOOTH LIGHT always maintains 5 phones in its memory.

You can easily switch to any of the paired phones by:

- Disconnecting the currently used phone using the "Active devices" in the Bluetooth menu of that phone.
- Connecting to the desired phone by using the "Paired devices" list in the Bluetooth menu of that wanted phone.

Note: Reconnection to a paired phone may also be done by pressing the **Accept Button (1)**. When you press the **Accept Button (1)**, the SUPERTOOTH LIGHT will attempt to connect to the last used phone only. Therefore, it is recommended to connect to another paired phone using the phone's menu.

Troubleshooting and Support Documents

Phone/Device Software

Please make sure you have the latest firmware upgrade for your phone, especially if you are using a PDA Phone. Go to the support section of the manufacturers' website to check you have the latest version. Many new mobile phones, pda's and computers phones require a Bluetooth patch to improve Bluetooth functionality from the original released version.

Resetting Your Phone/Device

Phones can become prone to software and memory issues which may cause Bluetooth reconnection problems. This can be fixed simply by turning the phone off and back on again. The phone will be reset and the working memory cleared.

See the support section of www.blueantwireless.com for troubleshooting and Frequently Asked Questions (FAQ).

Disclaimers

This manual is published by BlueAnt. The information contained in this document is subject to change without notice. All rights reserved. The Bluetooth word, mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by BlueAnt is under license. Other trademarks and trade names are those of their respective owners.

BlueAnt Warranty Process

- Should you be having difficulties in the operation of your device please refer to the online FAQ and support documents.
- 2. Check our website for more information, updated manuals and troubleshooting. www.blueantwireless.com
- Call us and speak to one of the BlueAnt Wireless Customer Service Team
 We will clarify whether you have a hardware or connection issue. See back
 page for 'contact us' details.
- Return the unit directly to BlueAnt for testing and replacement of faulty items Please call to arrange a Return Merchandise Authorization (RMA) number.

Warranty Terms and Conditions

BlueAnt Warrant the original purchaser of this product only. BlueAnt will replace or repair any faulty product provided it has not been misused or abused in any way. There are no user serviceable parts inside this product. Using a non-authorized repairer will void the warranty. The Warranty is valid for 2 years (24 months) from the date of purchase. Proof of purchase must be supplied to obtain warranty. The Device must be in original packaging with serial number for warranty to be valid. Warranties are effective from the proof of purchase date and not from the date of any subsequent repair or replacement.

SUPERTOOTH LIGHT Specifications

Bluetooth Compliance: Bluetooth version 1.2 specifications

Supported Bluetooth Profiles: Supports headset and handsfree profiles with

automatic detection

Operating Range: Up to 10 meters

Talk Time: Up to 15 hours

Stand-by time: Up to 800 hours

Charging Time: 3 hours

Battery Type: Rechargeable Lithium Ion

Special Features: > Full Duplex

> Full DSP Noise Cancellation / Echo Cancellation using CVC

> Digital Volume Control

> Voice Recognition Dialing (If phone supports)

> Last Call Redial > Reject Incoming Call

> Can also be charged directly from a PC via USB Cable (not included)

> Compact Size

Installation: Quick installation on sun visor via magnetic clip

Dimensions (mm): 18.2 x 60.2 x 122

Weight: 115 g

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste

disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

C€0678

This equipment is in compliance with the essential requirements and other relevant provisions of directive 1999/5/EC

FCC Notices

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure requirements:

"This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter."

Contact Us

For Connection Assistance or if you are having difficulties using your Supertooth Light, please make an enquiry on our website www.blueantwireless.com

OR CALL

Nth America support@myblueant.com 1 866 891-3032

New Zealand support@blueant.com.au 0800 443 122 (NZ)

Australia support@blueant.com.au 1300 669 049 (AUS)

